
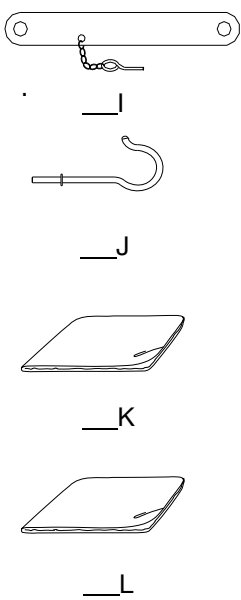


Pre-Assembly (continued)

PACKAGE CONTENTS

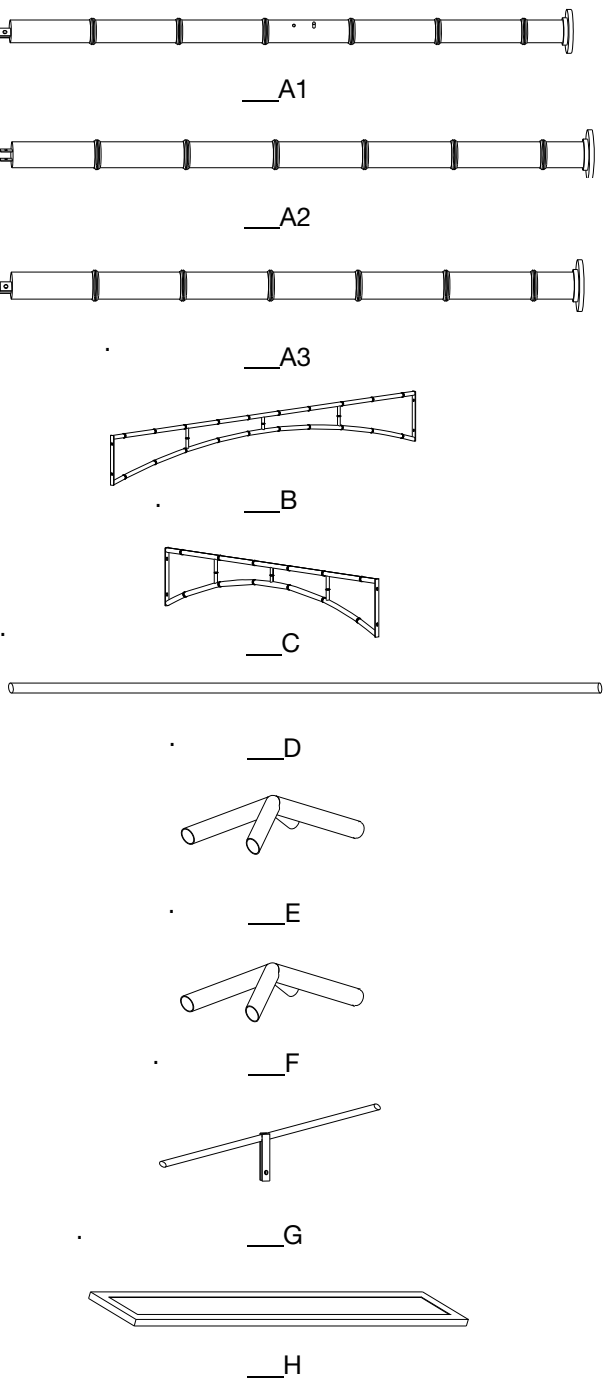

A1	Pole 1	2
A2	Pole 2	2
B	Long Screen	2
C	Short Screen	2
D	Corner Pole	4
E	Big Center Connector	1
F	Small Center Connector	1
G	Small Top Pole	4
H	Tabletop	2
I	Support bar	4
J	Hook	1
K	Small Canopy	1
L	Big Canopy	1


Installation

1 Attaching the screens to the poles

- Attach the short screen (C) and long screen (B) to pole 1 (A1), pole 2 (A2) and pole 3 (A3) using M6X20 bolts (AA) and M6 washers (BB).



NOTE: To avoid destroying the finish, please handle it with care.

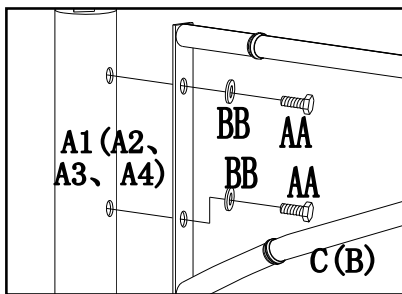


2 Attaching the big center connector

- Put the hook (J) into the big center connector (E). Insert the corner top pole (D) into the big center connector (E).



NOTE: To avoid destroying the finish, please handle it with care.

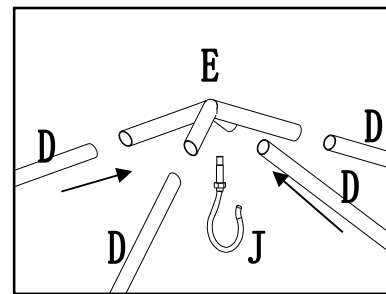


3 Attaching the corner top pole

- Attach the corner top pole (D) to the top of pole 2 (A2) using M6X40 bolts (CC), M6 washers (BB) and M6 nut (DD).



NOTE: To avoid destroying the finish, please handle it with care.

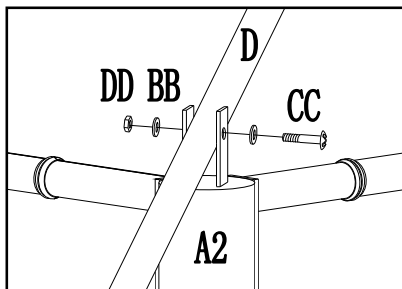


4 Attaching the small center connector

- Insert the small top poles (G) into the small center connector (F).



NOTE: To avoid destroying the finish, please handle it with care.

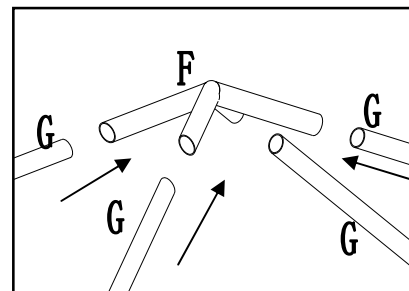

Installation


Installation (continued)

5 Attaching the canopy

- Put the big canopy (L) onto the big top. Do not fold. Attach the small top pole (G) to corner top pole (D) using a M6X40 bolt (CC), M6 washer (BB) and M6 nut (DD).



NOTE: To avoid destroying the finish, please handle it with care.

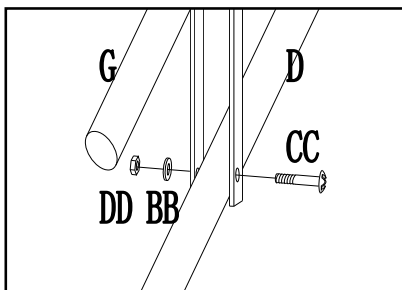


6 Attaching the support bar to the table top

- Attach the support bar (I) to the tabletop (H) using a M6X20 bolt (EE) and M6 washer (BB).




NOTE: To avoid destroying the finish, please handle it with Care.

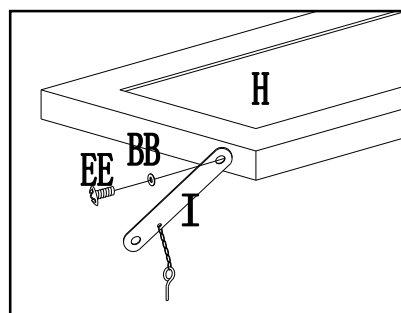

7 Attaching the table top to the poles

- Attach the tabletop (H) to the poles (A1 and A2) using M6X20 bolts (EE) and M6 washers (BB).

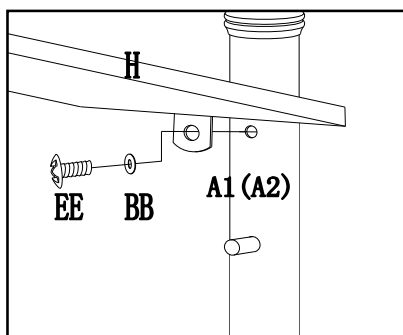

8 Finalizing the assembly

- Secure the other end of the support bar (I) to the poles (A1 and A2), then insert the Pin on the pole into the hole at the end of the support bar (I). Secure the gazebo using the stakes (FF).

